

The *Simplicity*[®] BRIDGE[™] System

The *Simplicity*[®] BRIDGE[™] System is for transferring building data to and from a remote computer anywhere in the world via the Internet. The BRIDGE[™] operates with *Simplicity*[®], *Simplicity*[®] Intelli-Comfort[™], *Simplicity*[®] Elite[™], and all future *Simplicity*[®] Controls.

BRIDGE is an Acronym for:

- **B**uilding
- **R**emote
- **I**nternet
- **D**ata
- **G**athering
- **E**nvironment

What it means to you:

- Bridge you to your Customers
- Bridge you to your Remote Buildings
- Bridge to Gather Remote DATA
- Bridge to Receive Remote Alarms
- Bridge to change Setpoints at a Remote Site
- Bridge to Reset Lockouts on Remote Equipment

The primary pieces of the BRIDGE are the *Simplicity*[®] Transporter[™] and the “*Simplicity* PC[™]” Freeware software.

The *Simplicity*[®] Transporter[™]:

- The Transporter will monitor up to 250 units on a single building
- Up to 5 people can access the building via the York DATA Server
- The User Names are called SNIDs (Simplicity Network IDs)
- The Transporter can send Alarms to one or all of the SNIDs it is set up to communicate with
- There will be no charge for the connection through the Server. This is a **Free** service for UPG Customers
- You will set the Transporter up at the remote building by giving it a SNID and associating it with up to 5 Users with pre-assigned SNIDs

The *Simplicity*[®] BRIDGE[™] is made up of these pieces:

- UPG Equipment with *Simplicity*[®] on the Roof
- The *Simplicity*[®] Transporter[™]**
- The “*Simplicity*PC[™]” software for the remote computer
- The UPG DATA Server
- The Internet via an Ethernet connection

** This is the only thing that must be purchased, because the *Simplicity*PC[™] software is **Free** and everything else is already in place, as long as there is a live Internet connection via Ethernet.

See Figure 1

Simplicity[®] BRIDGE[™] System

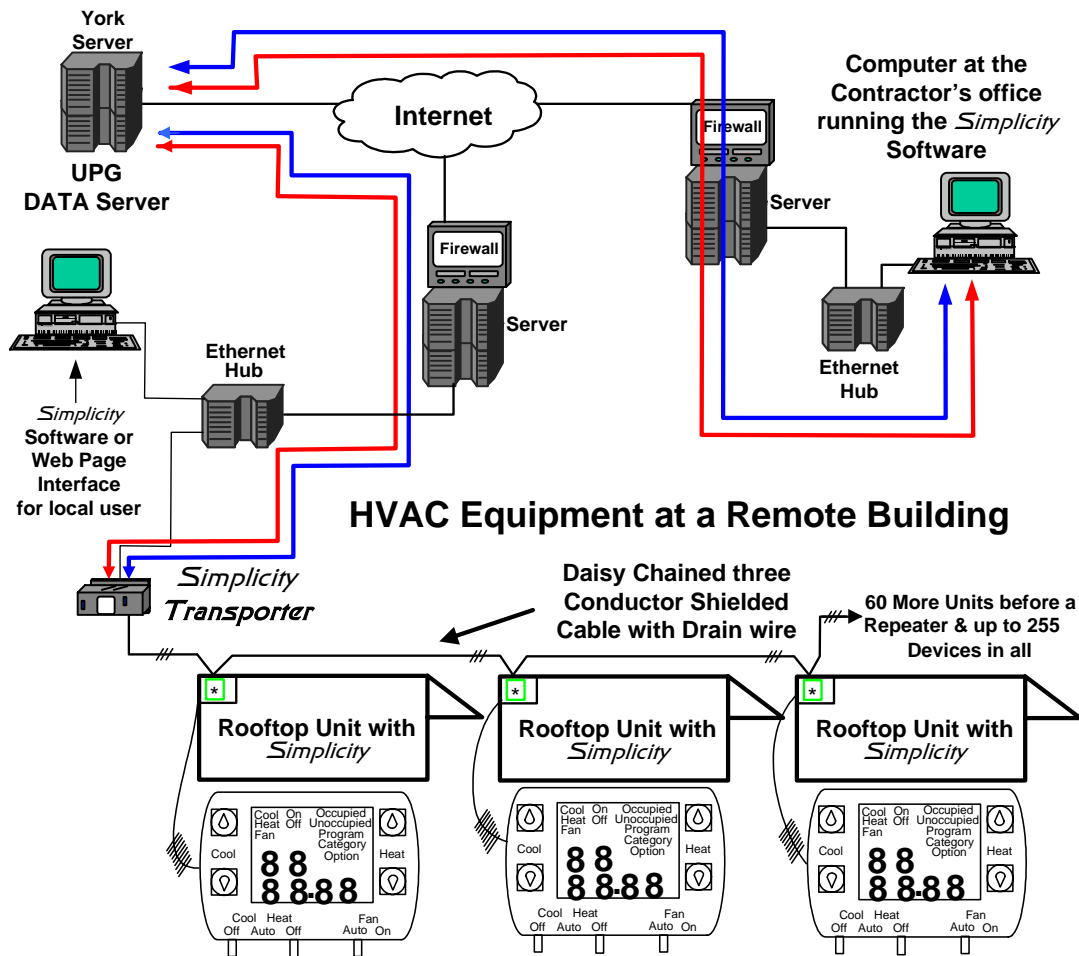


Figure 1