

INSTALLATION INSTRUCTION

SUSPENSION KIT FOR USE WITH F+RP / F+RC, F+FP / F+FC, N-AH & N-VS AIR HANDLERS

Supersedes: 535.02-N2.3V (795)

535.02-N2.3V (1297)

MODELS 1BH0601

035-13161

GENERAL

This kit is designed to be used with air handlers whenever the application requires vertical suspension of the unit.

The kit consists of :

1. Unit bracket.
2. Wall bracket.
3. (3) # 10 Self drilling screws.


WALL BRACKET MOUNTING

Align wall bracket to the position required for proper height of the unit. See Figure 1 for locating dimensions.

NOTE: The wall bracket is longer than the unit, see Figure 2. The mounting holes are spaced at 16" and 24" centers for stud mounting. If necessary the bracket may be cut if it interferes with the position of the unit. Use a minimum of (2) 1/4 x 3" lag bolts to mount the bracket.

UNIT BRACKET MOUNTING

Slide 17" unit bracket up under the rear top panel. Attach with 3 #10 self drilling screws provided in the kit.

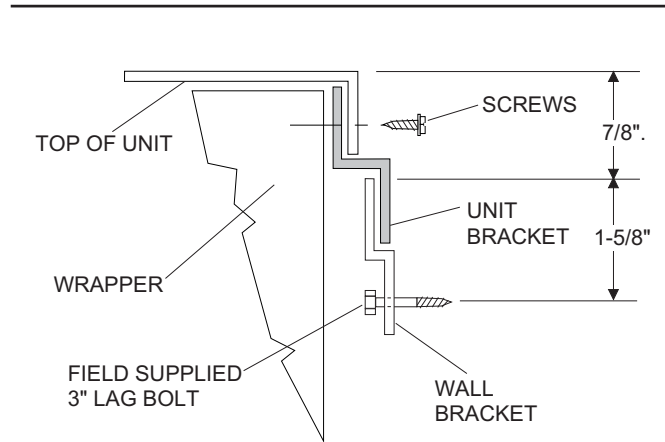

SIDE VIEW

FIGURE 1 - BRACKET ORIENTATION

SUSPENDING THE UNIT

Mount unit, interlocking the two brackets as shown in Figure 1. It may be necessary to use a screw as a stop to prevent the unit from sliding sideways.

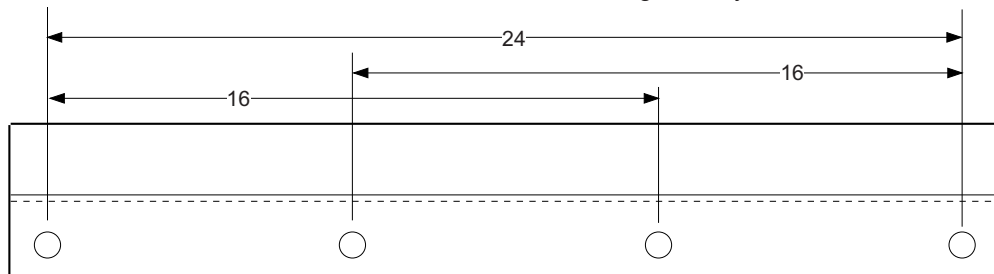


FIGURE 2 - WALL BRACKET DIMENSIONS